

Automatic Oiler

Fill and Adjustment Instructions

****iMPORTANT****

Before filling the oiler or performing any maintenance on the unit, be sure to turn the air pressure on the regulator to zero psi and drain all residual air from the system by pressing open and close on the control box.

FILLING THE OILER WITH OIL.

- Unscrew the fill cap from the top of the oiler.
- Pour Airlift Cylinder Lubricant, or other non-detergent 10W oil, into the fill hole until the oil level reaches the max fill line as shown to the right.

ADJUSTING THE OILER

- Turn the adjustment knob completely clockwise. (This is the OFF position.)
- Turn the adjustment knob counter-clockwise 1/4 turn. This will allow approximately one drop of oil per cycle.

